

ブラウン管テレビ 型名順 販売年度一覧表(カラーテレビ)

2010年7月

型名	販売開始年	経過年数
14C-220	1972	38
14CT-15B	1964	46
14H-440	1971	39
15C-150	1971	39
17C-401	1971	39
17CT-20	1964	46
17CT-20S	1964	46
18C-451	1971	39
18C-451(H)	1972	38
18C-550	1971	39
18H-550	1971	39
18H-550D	1972	38
20C-2000	1971	39
20C-2000R	1971	39
20C-501	1971	39
20C-501S	1971	39
20C-801	1971	39
20C-811D	1971	39
20C-901	1971	39
20C-901(B)	1971	39
20C-921M	1971	39
20C-921M-C	1972	38
20C-990	1971	39
20C-990A	1973	37
20C-990A(B)	1973	37
20C-990A-A	1974	36
20C-990A-C	1974	36
20C-990R	1971	39
20C-990V	1972	38
20H-660	1971	39
21CT-11B	1960	50
AV-14	1981	29
AV-14HR1	1993	17
AV-16EV6	1996	14
AV-20	1981	29
AV-20(A)	1981	29
AV-200	1983	27
AV-20000	1991	19
AV-200S	1983	27
AV-201	1983	27
AV-202	1983	27
AV-20BR	1982	28
AV-20EV5	1995	15
AV-20EV6	1996	14
AV-20M	1981	29
AV-20M(A)	1982	28
AV-20MX6	1996	14
AV-20V4	1994	16
AV-210	1985	25
AV-210(A)	1985	25
AV-2100	1986	24
AV-210D	1986	24
AV-2130	1988	22
AV-21A1	1989	21
AV-21A1(A)	1990	20
AV-21AF1	1990	20

型名	販売開始年	経過年数
AV-21BF1	1990	20
AV-21D2	2002	8
AV-21DD2	2001	9
AV-21F90	1999	11
AV-21H90	1999	11
AV-21K1	2000	10
AV-21K1/A	2002	8
AV-21K1/B	2001	9
AV-21K1/C	2001	9
AV-21K1-A	2001	9
AV-21K1-C	2001	9
AV-21K20	1994	16
AV-21K20(A)	1994	16
AV-21K3	2002	8
AV-21K3/A	2002	8
AV-21K3/BT	2003	7
AV-21K3/BT	2006	4
AV-21K3/CT	2004	6
AV-21K3/DT	2007	3
AV-21M10	1994	16
AV-21M10(A)	1994	16
AV-21N1	2000	10
AV-21N1/E	2002	8
AV-21N1/F	2002	8
AV-21N1/G	2002	8
AV-21N1/JT	2004	6
AV-21N1/KT	2004	6
AV-21N1/MT	2006	4
AV-21N1/NT	2007	3
AV-21N1/PT	2008	2
AV-21N1H	2000	10
AV-21N1H/A	2001	9
AV-21R1	1991	19
AV-21R1-A	1992	18
AV-21R1-H	1992	18
AV-21R1-R	1992	18
AV-21R2	1992	18
AV-21S1	1991	19
AV-21S1(A)	1992	18
AV-21S4	1994	16
AV-21S4(A)	1994	16
AV-21S6	1996	14
AV-21S7	1997	13
AV-21S7H	1999	11
AV-21SR9	1999	11
AV-21SR9(A)	1999	11
AV-21VR1	2000	10
AV-21VR1/A	2002	8
AV-21YA1	2000	10
AV-21YA1/A	2002	8
AV-21YA11	2002	8
AV-21YA11/A	2002	8
AV-21YA11/BT	2003	7
AV-21YA11/CT	2004	6
AV-21YA11/DT	2007	3
AV-21YA1-A	2001	9

型名	販売開始年	経過年数
AV-21YS2	1999	11
AV-21YS2(A)	1999	11
AV-240	1985	25
AV-240D	1985	25
AV-240D(A)	1986	24
AV-24EV5	1995	15
AV-24EX5	1995	15
AV-24EX6	1996	14
AV-24HR4	1994	16
AV-24V2	1997	13
AV-24V4	1994	16
AV-24X2	1997	13
AV-24X3	1993	17
AV-24X3	1993	17
AV-24X4	1994	16
AV-25A1	1989	21
AV-25AF1	1990	20
AV-25AF1(A)	1990	20
AV-25AF1(B)	1991	19
AV-25AF1(C)	1992	18
AV-25AF1(D)	1992	18
AV-25AF2C	1991	19
AV-25AF2D	1992	18
AV-25AF3C	1990	20
AV-25AFC2	1991	19
AV-25AFC3	1990	20
AV-25BF1	1990	20
AV-25BS2	1990	20
AV-25F2	1992	18
AV-25F90	1999	11
AV-25F90/A	1999	11
AV-25G1	1988	22
AV-25G2	1989	21
AV-25K1	2000	10
AV-25K1/A	2001	9
AV-25K1/C	2002	8
AV-25KB1	2000	10
AV-25M10	1994	16
AV-25Q3	1993	17
AV-25Q3(A)	1994	16
AV-25R1	1991	19
AV-25S3	1993	17
AV-25S3(A)	1994	16
AV-25S4	1994	16
AV-25S6	1996	14
AV-25S7	1997	13
AV-25S7(A)	1998	12
AV-25SR9	1999	11
AV-25SR9(A)	1999	11
AV-25YA11	2004	6
AV-25YA11/BT	2006	4
AV-26	1981	29
AV-26(A)	1982	28
AV-260	1983	27
AV-26MT	1983	27
AV-27A1	1989	21

注記) 経過年数は2010年7月現在の年数であり、実際にお使いの年数とは異なる場合があります。

ブラウン管テレビ 型名順 販売年度一覧表(カラーテレビ)

2010年7月

型名	販売開始年	経過年数
AV-27G2	1989	21
AV-2800	1986	24
AV-2800(A)	1986	24
AV-28A2	2001	9
AV-28A2-A	2001	9
AV-28AD1	2000	10
AV-28AD1/B	2000	10
AV-28AD1/C	2000	10
AV-28DD2	2001	9
AV-28DD2/A	2001	9
AV-28DD2-B	2001	9
AV-28E2	1997	13
AV-28E60	1996	14
AV-28EH5	1996	14
AV-28EX5	1995	15
AV-28F2	1997	13
AV-28H1	1996	14
AV-28JX5	1994	16
AV-28M1	1996	14
AV-28MF8	1998	12
AV-28MP900	1999	11
AV-28P1	1996	14
AV-28PM2	1997	13
AV-28SX5	1995	15
AV-28T1	1996	14
AV-28V4	1994	16
AV-28VF8	1998	12
AV-28VF90	1999	11
AV-28VF90/A	1999	11
AV-28WX2	1992	18
AV-28X2	1997	13
AV-28X3	1993	17
AV-28X4	1994	16
AV-28X4(A)	1994	16
AV-28X65	1996	14
AV-29A1	1989	21
AV-29A2	1991	19
AV-29A2(A)	1991	19
AV-29A2(A)	1991	19
AV-29A2(B)	1992	18
AV-29BF1	1990	20
AV-29BS1	1989	21
AV-29BS2	1990	20
AV-29BS8	1998	12
AV-29BS8(A)	1998	12
AV-29DD2	2001	9
AV-29F2	1992	18
AV-29G1	1988	22
AV-29G2	1989	21
AV-29GF1	1990	20
AV-29GX1	1989	21
AV-29GZ1	1990	20
AV-29HF8	1998	12
AV-29HF8/A	1999	11
AV-29HF90	1999	11
AV-29KB1	2000	10

型名	販売開始年	経過年数
AV-29KB1-B	2001	9
AV-29KB3	2002	8
AV-29KB3/A	2002	8
AV-29KB3/BT	2003	7
AV-29KB5	2004	6
AV-29KJ3	2002	8
AV-29KJ3/A	2002	8
AV-29P1	1991	19
AV-29R1	1992	18
AV-29V3	1993	17
AV-29X1	1992	18
AV-29X1(A)	1991	19
AV-29YB11	2002	8
AV-29YB11/A	2002	8
AV-29YB11/BT	2003	7
AV-31GX1	1989	21
AV-32AD1	2000	10
AV-32AD1/B	2000	10
AV-32AD1/C	2000	10
AV-32AD1/D	2000	10
AV-32AD2	2001	9
AV-32AD2-A	2001	9
AV-32CX3	1993	17
AV-32DD2	2002	8
AV-32DD2/A	2001	9
AV-32DD2-B	2001	9
AV-32DD2-C	2001	9
AV-32EH5	1996	14
AV-32EM6	1996	14
AV-32EX5	1995	15
AV-32F2	1997	13
AV-32F2(A)	1997	13
AV-32H1	1996	14
AV-32MF8	1998	12
AV-32MH8	1998	12
AV-32ML	2000	10
AV-32ML/A	2001	9
AV-32MP900	1999	11
AV-32P1	1996	14
AV-32PM2	1997	13
AV-32PM2(B)	1997	13
AV-32SX5	1995	15
AV-32VF8	1998	12
AV-32VF90	1999	11
AV-32VF90/A	2000	10
AV-32W2	1992	18
AV-32WX2	1992	18
AV-32X1500	2003	7
AV-32X1500/A	2003	7
AV-32X3	1993	17
AV-32X4	1994	16
AV-32YF1	1998	12
AV-32Z1500	2001	9
AV-33BS2	1990	20
AV-33BS2(A)	1990	20
AV-33D1	1989	21

型名	販売開始年	経過年数
AV-33G2	1989	21
AV-36MF8	1998	12
AV-36W1	1991	19
AV-36X1500	2003	7
AV-36Z1500	2001	9
AV-37G2	1989	21
AV-37G2(A)	1990	20
AV-37H1	1988	22
AV-51VP1	1991	19
AV-A210	1988	22
AV-A211	1988	22
AV-A250	1988	22
AV-A270	1988	22
AV-A275	1988	22
AV-A290	1988	22
AV-A290(A)	1988	22
AV-BX29	1988	22
AV-BY29(A)	1998	12
AV-C21	1986	24
AV-C2100	1986	24
AV-E19S	1987	23
AV-E21MK	1987	23
AV-E21S	1987	23
AV-E25S	1987	23
AV-E29S	1987	23
AV-E29S(A)	1988	22
AV-F18	1982	28
AV-F19	1983	27
AV-F19S	1984	26
AV-F19SL	1984	26
AV-F20	1982	28
AV-F21	1983	27
AV-F21SL	1984	26
AV-F21WD	1984	26
AV-H26C	1987	23
AV-H26S	1987	23
AV-H26S(A)	1988	22
AV-H26S(B)	1988	22
AV-H290	1988	22
AV-H290(A)	1988	22
AV-H29S	1987	23
AV-H29S(A)	1987	23
AV-H29S(B)	1988	22
AV-H320	1988	22
AV-H32S	1987	23
AV-M150	1985	25
AV-M150S	1987	23
AV-M210	1985	25
AV-M210S	1987	23
AV-M21A1	1990	20
AV-M25A1	1990	20
AV-M27A1	1990	20
AV-M280	1985	25
AV-M280S	1987	23
AV-M290S	1987	23
AV-M29A1	1990	20

注記) 経過年数は2010年7月現在の年数であり、実際にお使いの年数とは異なる場合があります。

ブラウン管テレビ 型名順 販売年度一覧表(カラーテレビ)

2010年7月

型名	販売開始年	経過年数
AV-M29A1-A	1991	19
AV-M320S	1987	23
AV-M370	1986	24
AV-M3700S	1987	23
AV-MT15	1983	27
AV-MT21	1984	26
AV-MT21(A)	1985	25
AV-MT28	1985	25
AV-S18	1983	27
AV-S18(A)	1983	27
AV-S18(B)	1984	26
AV-S18C	1983	27
AV-S19S	1987	23
AV-S20	1983	27
AV-S20(A)	1983	27
AV-S20(B)	1984	26
AV-S2100	1986	24
AV-S21S	1987	23
AV-S25	1986	24
AV-S25S	1987	23
AV-S29	1986	24
AV-T2101	1991	19
AV-T2101(A)	1992	18
AV-T2501	1991	19
AV-T2501-A	1993	17
AV-T26S	1987	23
AV-T2901	1991	19
AV-T2901-A	1993	17
AV-T320S	1998	12
C-1014H	1972	38
C-1014M	1973	37
C-1016M	1979	31
C-1020S	1972	38
C-1114M	1976	34
C-1114MT	1978	32
C-1120B	1973	37
C-1120M	1973	37
C-1214M	1979	31
C-1220S	1975	35
C-1220S(G)	1976	34
C-1314H	1974	36
C-1320B	1976	34
C-1320BT	1978	32
C-140M	1980	30
C-140V	1986	24
C-140VB	1986	24
C-140VS	1986	24
C-1420S	1973	37
C-1427	1979	31
C-1427(A)	1979	31
C-1427(N)	1979	31
C-1427KD	1981	29
C-1428	1978	32
C-1428K	1979	31
C-1430	1980	30
C-1430(A)	1982	28

型名	販売開始年	経過年数
C-1430N	1981	29
C-1450	1981	29
C-1450W	1982	28
C-1459	1979	31
C-1468E	1977	33
C-1468EA	1977	33
C-1468K	1979	31
C-1469	1979	31
C-1470	1980	30
C-148	1988	22
C-148(A)	1988	22
C-14B1	1989	21
C-14B1(A)	1989	21
C-14B1(B)	1990	20
C-14B2	1991	19
C-14B2(A)	1991	19
C-14B2(B)	1992	18
C-14B2(B)	1992	18
C-14HR8-B	1998	12
C-14HR8-B(A)	1998	12
C-14HR8-Z	1998	12
C-14HR8-Z(A)	1998	12
C-14HRD	1998	12
C-14HRD(A)	1998	12
C-14K20	1994	16
C-14M10	1994	16
C-14M10(A)	1995	15
C-14MR1-A	2000	10
C-14MR1-C	2000	10
C-14MR1-G	2000	10
C-14MRD	2000	10
C-14N	1984	26
C-14N(H)	1985	25
C-14NR	1984	26
C-14NR(H)	1985	25
C-14R	1982	28
C-14R(A)	1983	27
C-14R2	1997	13
C-14R90	1999	11
C-14R90/A	2004	6
C-14R90/BT	2004	6
C-14R90/CT	2004	6
C-14R90/DT	2007	3
C-14RH	2000	10
C-14RX	1983	27
C-14RX(A)	1983	27
C-14RX(H)	1985	25
C-14S3	1993	17
C-14S3(A)	1995	15
C-14V6	1996	14
C-14VX	1984	26
C-14VXB	1984	26
C-14VXG	1984	26
C-14VXP	1984	26
C-14VXR	1984	26
C-14VXS	1984	26

型名	販売開始年	経過年数
C-150VB	1985	25
C-150VS	1985	25
C-1520B	1974	36
C-15RX1	1983	27
C-1620B	1974	36
C-1628	1978	32
C-1628K	1978	32
C-1668E	1978	32
C-1668E(T)	1978	32
C-1668K	1978	32
C-1668K(T)	1979	31
C-1678E	1977	33
C-1720B	1976	34
C-1800M	1979	31
C-1807	1977	33
C-1850	1981	29
C-1850S	1982	28
C-1867E	1977	33
C-1867EA	1977	33
C-1868E	1978	32
C-1868EM	1979	31
C-1868K	1978	32
C-1868K(T)	1981	29
C-1878E	1977	33
C-1879	1979	31
C-1879(A)	1980	30
C-1879(T)	1981	29
C-1887DX	1977	33
C-1890R	1980	30
C-1898S	1978	32
C-18RX	1983	27
C-18RX1	1984	26
C-190V	1985	25
C-191V	1986	24
C-192V	1987	23
C-198	1988	22
C-19B1	1989	21
C-19B1(B)	1990	20
C-19B1(C)	1990	20
C-19M1	1986	24
C-19VB	1985	25
C-19VX	1984	26
C-200M	1982	28
C-2067E	1977	33
C-2067EA	1977	33
C-2068K	1978	32
C-2068KA	1979	31
C-2068KA(T)	1981	29
C-2078E	1977	33
C-208	1968	42
C-2088E	1978	32
C-2097DX	1976	34
C-2097DX(G)	1976	34
C-2098S	1979	31
C-20HR6	1996	14
C-210D(A)	1986	24

注記) 経過年数は2010年7月現在の年数であり、実際にお使いの年数とは異なる場合があります。

ブラウン管テレビ 型名順 販売年度一覧表(カラーテレビ)

2010年7月

型名	販売開始年	経過年数
C-2113	1975	35
C-2113A	1976	34
C-211V	1986	24
C-212V	1987	23
C-218	1988	22
C-21B1	1989	21
C-21B1(B)	1990	20
C-21HR5	1995	15
C-21HR7	1997	13
C-21K	1989	21
C-21K-A	1990	20
C-21M	1984	26
C-21M(A)	1985	25
C-21MR9	1999	11
C-21MR9(S)	1999	11
C-21VX	1984	26
C-21VX(A)	1985	25
C-2269	1979	31
C-2298ER	1977	33
C-2298K	1978	32
C-2298K(R)	1979	31
C-25HR7	1997	13
C-2668ER	1978	32
C-2668K	1978	32
C-2668K(R)	1978	32
C-2669	1979	31
C-2698ER	1977	33
C-2699S	1979	31
C-2699SA	1980	30
C-26M	1984	26
C-26VX	1984	26
C-280E	1986	24
C-280V	1985	25
C-280VB	1985	25
C-280VB(A)	1986	24
C-290S	1987	23
C-300T	1970	40
C-300T(B)	1970	40
C-3014	1972	38
C-318	1968	42
C-3214	1973	37
C-3314	1972	38
C-3414	1974	36
C-350	1970	40
C-3514	1975	35
C-3514(G)	1976	34
C-357	1968	42
C-3614	1976	34
C-3614A	1978	32
C-3614K	1978	32
C-3614KD	1980	30
C-4116	1975	35
C-420M	1970	40
C-4216	1972	38
C-4216A	1973	37
C-429(U)	1970	40

型名	販売開始年	経過年数
C-4316	1972	38
C-4416	1974	36
C-450	1970	40
C-4616	1976	34
C-4616A	1976	34
C-4716E	1973	37
C-5018	1972	38
C-5018A	1973	37
C-5018A-A	1974	36
C-5018B	1973	37
C-5118	1972	38
C-5218	1975	35
C-5218A	1975	35
C-5318	1975	35
C-5318(G)	1975	35
C-5318(K)	1975	35
C-5318-B	1975	35
C-538	1968	42
C-538U	1969	41
C-5518	1972	38
C-5618	1976	34
C-5618(G)	1976	34
C-5718E	1973	37
C-5718E-A	1974	36
C-5818	1974	36
C-6020	1972	38
C-6120	1972	38
C-6220	1975	35
C-6220(G)	1975	35
C-6320	1976	34
C-6320(G)	1976	34
C-6420	1973	37
C-650M	1970	40
C-6620D	1972	38
C-6720E	1973	37
C-6720E-A	1974	36
C-6820	1974	36
C-7120	1972	38
C-719	1969	41
C-728	1969	41
C-738	1969	41
C-738D	1969	41
C-739	1969	41
C-750	1970	40
C-7720E	1973	37
C-7720E-A	1974	36
C-7820W	1972	38
C-7920	1975	35
C-800	1970	40
C-8022E	1973	37
C-808	1968	42
C-808D	1968	42
C-809B	1969	41
C-811	1971	39
C-820	1970	40
C-8200S	1978	32

型名	販売開始年	経過年数
C-8200S(U)	1979	31
C-8200SE	1979	31
C-8200SV	1979	31
C-8201B	1978	32
C-8202B	1978	32
C-8300	1983	27
C-8300V	1984	26
C-8301B	1984	26
C-8302B	1989	21
C-8321	1991	19
C-8321(A)	1991	19
C-8325	1991	19
C-8325-A	1992	18
C-8329	1991	19
C-8329-A	1992	18
C-8329-B	1996	14
C-838	1968	42
C-838D	1968	42
C-839	1969	41
C-8421	1995	15
C-8425	1995	15
C-8425A	1996	14
C-8429	1996	14
C-850	1970	40
C-8500S	1989	21
C-8500S-A	1990	20
C-8500S-B	1993	17
C-8529	1999	11
C-8529/A	2001	9
C-859S	1970	40
C-880	1970	40
C-8822	1976	34
C-900T	1970	40
C-9020	1975	35
C-9020(G)	1975	35
C-950	1971	39
C-9620	1976	34
C-9926R	1973	37
C-F21X	1995	15
CX-101	1982	28
CX-180	1978	32
CX-180K	1978	32
CX-181	1979	31
CX-182S	1979	31
CX-183	1980	30
CX-1831	1981	29
CX-184	1981	29
CX-200	1978	32
CX-200K	1978	32
CX-201	1979	31
CX-202S	1979	31
CX-203	1980	30
CX-2031	1981	29
CX-204	1981	29
CX-205	1980	30
CX-265	1981	29

注記) 経過年数は2010年7月現在の年数であり、実際にお使いの年数とは異なる場合があります。

ブラウン管テレビ 型名順 販売年度一覧表(カラーテレビ)

2010年7月

型名	販売開始年	経過 年数
CX-265(A)	1983	27
CX-30	1983	27
CX-50	1978	32
CX-53	1980	30
CX-55V	1978	32
CX-60	1983	27
CX-600	1980	30
CX-61	1979	31
CX-61A	1980	30
CX-61S	1981	29
CX-62	1979	31
CX-64	1981	29
CX-65M	1981	29
CX-65MX	1981	29
HD-32D1500	2003	7
HD-32D1500/A	2003	7
HD-32DZ4	2003	7
HD-32DZ4/BT	2004	6
HD-32JT100	2003	7
HD-32JT100/A	2003	7
HD-32LS1	2000	10
HD-32LS2	2001	9
HD-32LS3	2002	8
HD-36D1500	2003	7
HD-36DZ4	2003	7
HV-28EZ5	1995	15
HV-28WZ1	1996	14
HV-28Z2	1997	13
HV-28Z5	1994	16
HV-28Z8	1998	12
HV-32EZ5	1995	15
HV-32PZ2	1997	13
HV-32PZ2(A)	1999	11
HV-32PZ8	1998	12
HV-32PZ900	1999	11
HV-32WZ1	1996	14
HV-32Z1	1996	14
HV-32Z3	1993	17
HV-32Z8	1998	12
HV-3600	1992	18
HV-36PZ8	1998	12
HV-48Z1	1996	14
HV-M170V	1998	12
HV-M200	1986	24
HV-M200(A)	1988	22
HV-M290	1989	21
HV-M290T	1990	20
HV-M320	1992	18
V-14MR	1984	26
V-14R	1982	28
V-18R	1982	28
V-18RS	1983	27
V-21M	1984	26
V-26M	1984	26

注記) 経過年数は2010年7月現在の年数であり、実際にお使いの年数とは異なる場合があります。